



Aux Power Strip tech note

An "Auxiliary" Power Strip may have been included with your purchase.

This strip is used for automatically starting and stopping accessories via the Vision Serial controllers "AUX ON/OFF" button.

Typical uses include: Vacuum Systems, Air-Assist units, oilers, lighting etc..

Please **DO NOT** plug any of your Vision equipment (except the Vacuum system) or personal computers into this strip, as it will not function unless the Vision serial controller is powered on. This is not possible with the "Auxiliary" strip, because it is always "OFF" unless the controller is powered on and "AUX ON/OFF" is green.