

Vision 10 Software Installation Guide

© 2018 Vision Engraving & Routing Systems



Vision 10 Software Installation Guide

© 2018 Vision Engraving & Routing Systems

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Revised: 8/10/2018

Table of Contents

Part I Introduction	4
1 Computer Requirements.....	5
2 Installation	6
Vision Software	6

1 Introduction

Important Note:

The Vision software is available in two versions; one with a dongle, and one that is "dongle-less" and is loaded on to a USB Memory stick.

If your machine was delivered with, or you currently have the white/blue or orange software dongle, **DO NOT LOSE IT!**

The Vision software will **NOT** run without the dongle plugged into the computer.



1.1 Computer Requirements

Minimum System Requirements:

CPU:	Dual Core (2.0GHz or higher)
Hard Drive:	750 GB free space
RAM:	1GB + OS Requirements
Operating System:	Windows 10 (32/64 bit) Windows 8 (32/64 bit) Windows 7 SP.1 (32/64 bit) ***Requires Service Pack 1
Ports:	USB port for security dongle Local or network Ethernet port to connect machine

Suggested System Requirements















CPU:	Core i3 (or faster)
Hard Drive:	1 TB (or more)
RAM::	4GB + OS Requirements
Operating System:	Windows 10 (32/64 bit) Windows 8 (32/64 bit) Windows 7 SP.1 (32/64 bit) ***Requires Service Pack 1
Ports	USB port for security dongle Local or network Ethernet port to connect machine

1.2 Installation


1.2.1 Vision Software

Insert the Vision USB dongle into the USB port on the computer. Navigate to the Devices and Drives area on your PC. Double click on the Vision icon to open the files on the USB dongle.

Select the Start or Start.exe file to begin.

<input type="checkbox"/> Name	Date modified	Type	Size
 cdmldata	7/31/2018 3:54 PM	File folder	
 ClipArt	7/30/2018 4:29 PM	File folder	
 Vision Pro dongle driver	7/30/2018 4:16 PM	File folder	
 Vision Screen Backgrounds	7/30/2018 4:16 PM	File folder	
 VPro	7/31/2018 12:57 PM	File folder	
 AUTORUN.INF	7/31/2018 4:42 PM	Setup Information	1 KB
 ProductS.ini	8/1/2018 1:57 PM	Configuration sett...	1 KB
 ProductS.lcf	8/1/2018 1:57 PM	LCF File	3 KB
 slcdmenu.cdi	7/31/2018 4:42 PM	CDI File	10 KB
 SLCDMENU.EXE.manifest	8/24/2015 1:02 PM	MANIFEST File	1 KB
<input checked="" type="checkbox"/>  Start.exe	1/17/2017 6:10 PM	Application	391 KB
 Version 2.02 S5.txt	6/19/2012 9:52 AM	Text Document	0 KB
 Vision Software.msi	8/1/2018 1:47 PM	Windows Installer ...	579,809 KB
 VISION.ICO	1/5/2012 11:11 AM	Icon	289 KB


Click on the Install Vision Software button.

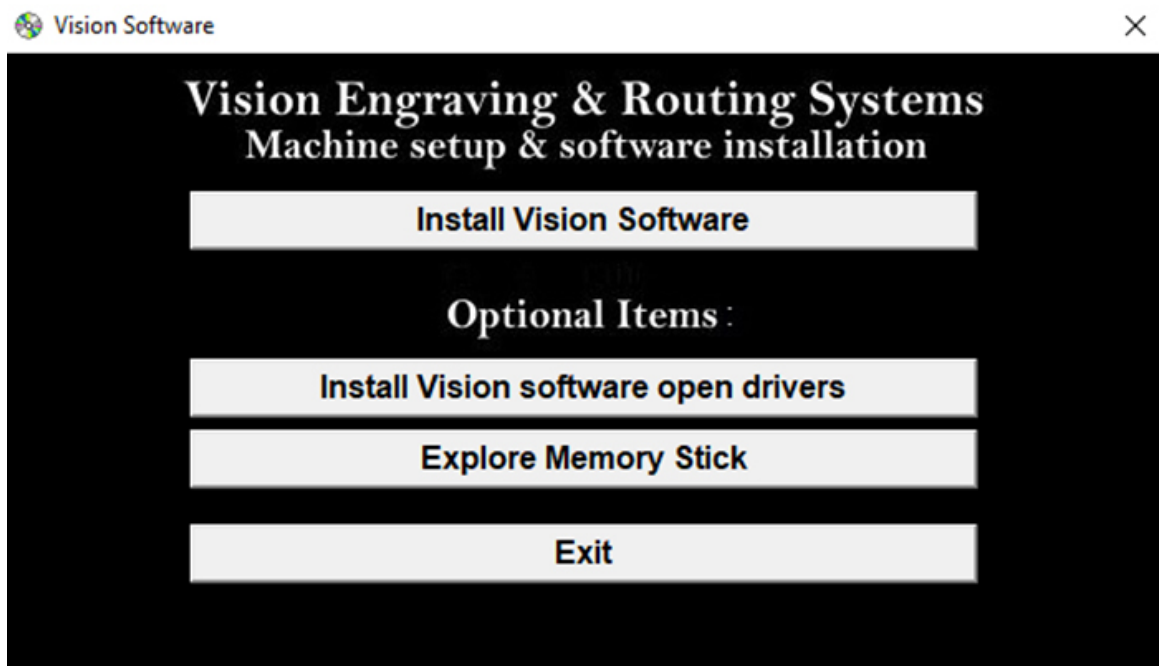


The Vision S5 Software Wizard will guide you through the process of installing the software. Press Next to continue.




Press Install to continue

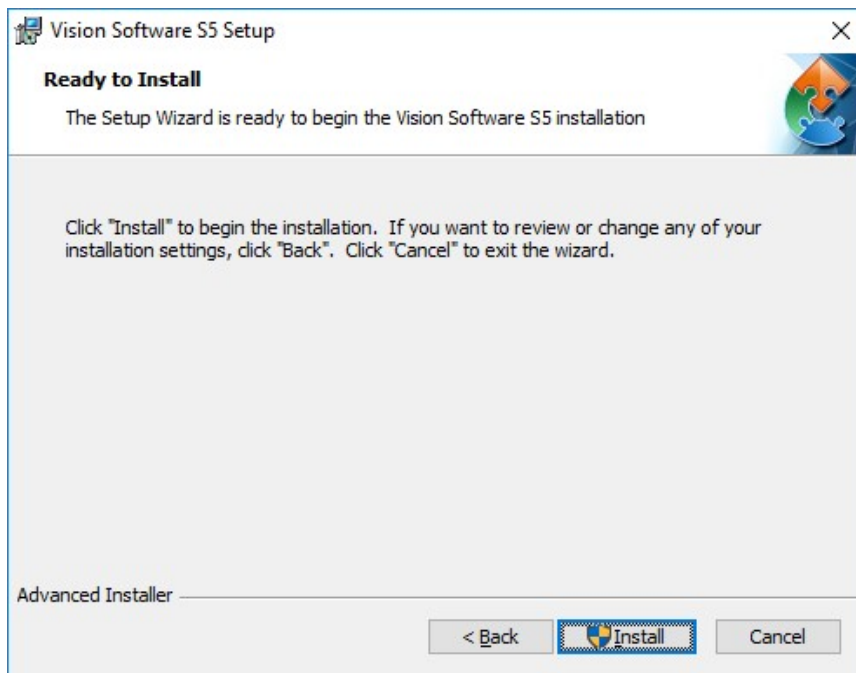


Setup wizard will install the program.

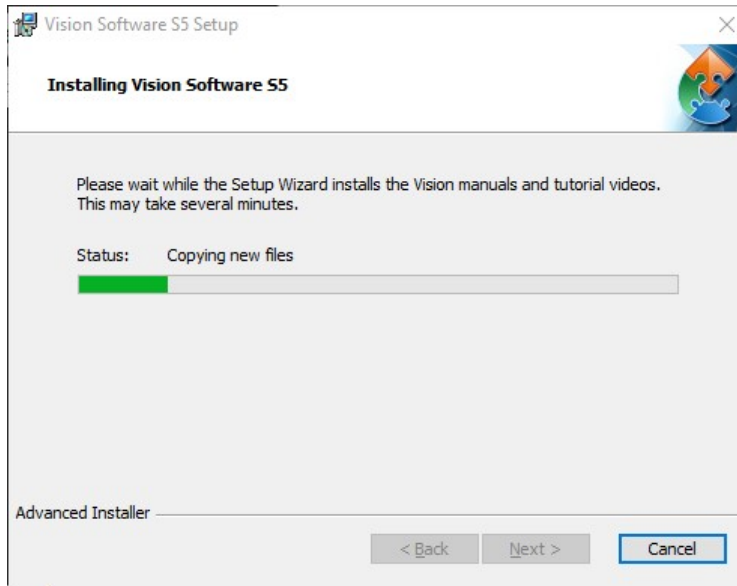

Select Finish to continue the software installation.

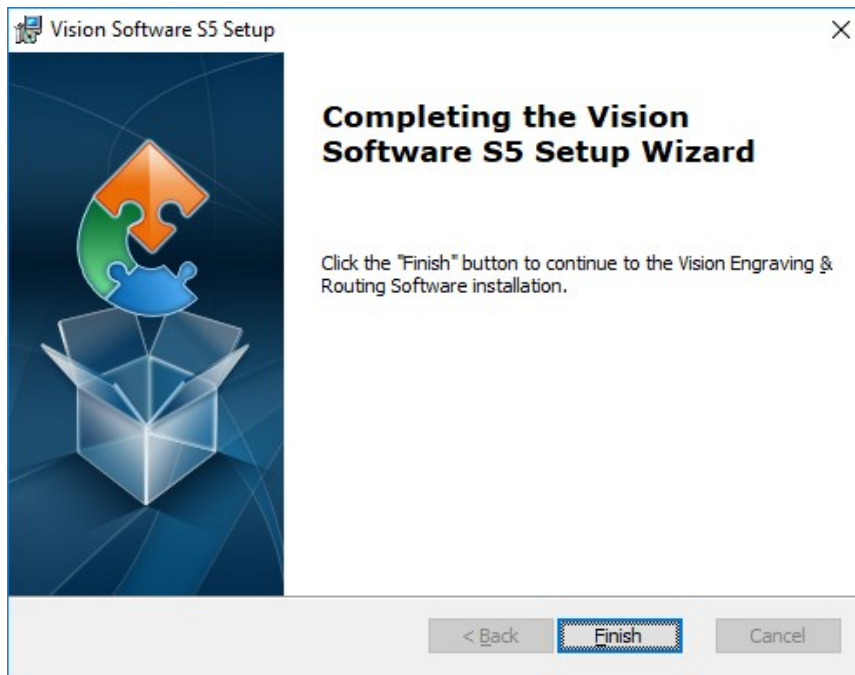


Choose your preferred language and click ok.

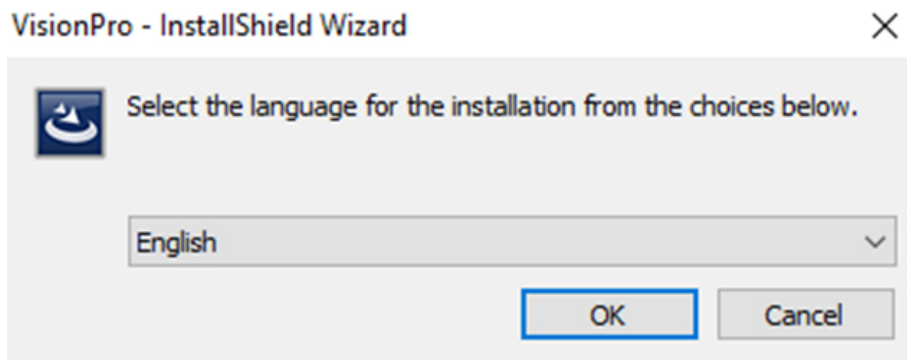


The Vision 10 Setup Screen will appear. Press Next.




After accepting the license agreement, click on the Next button.

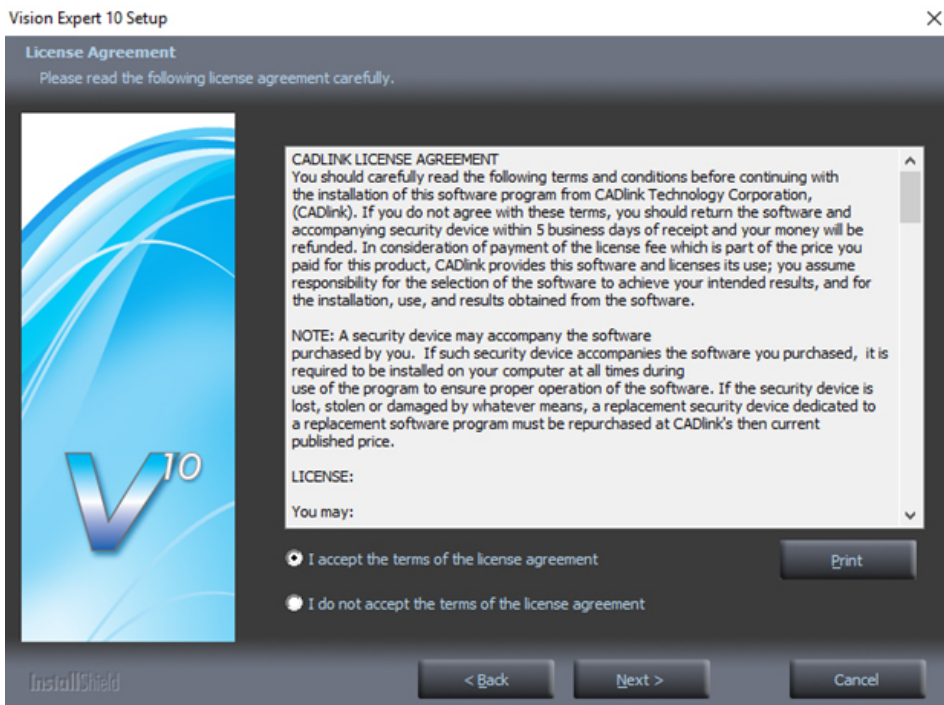


Select Next (or change the destination folder - not recommended).

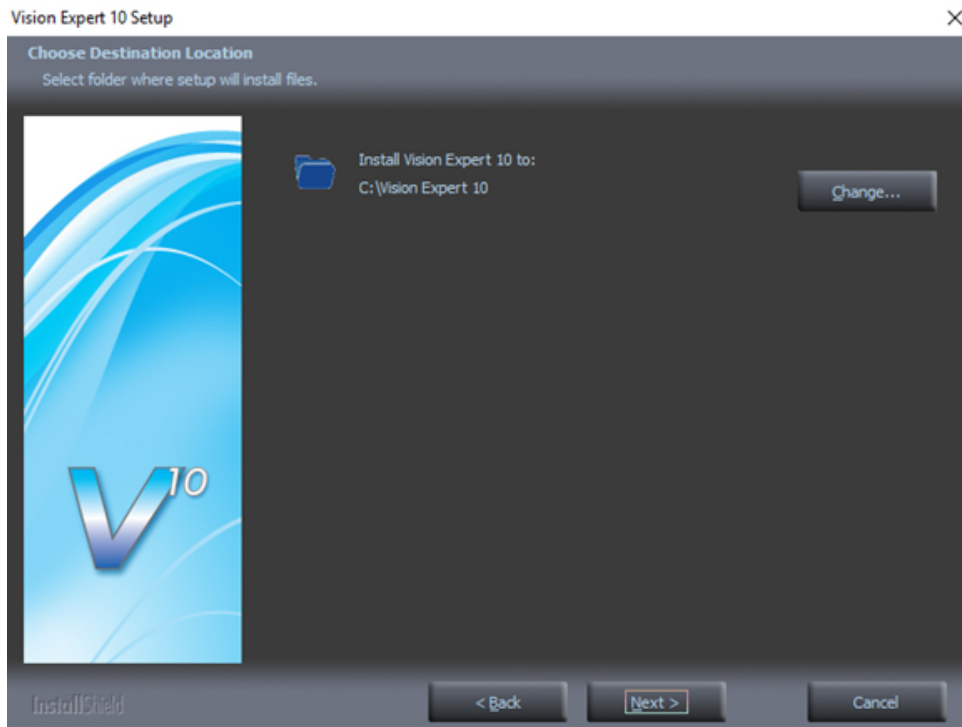


Select Next to create the folder.

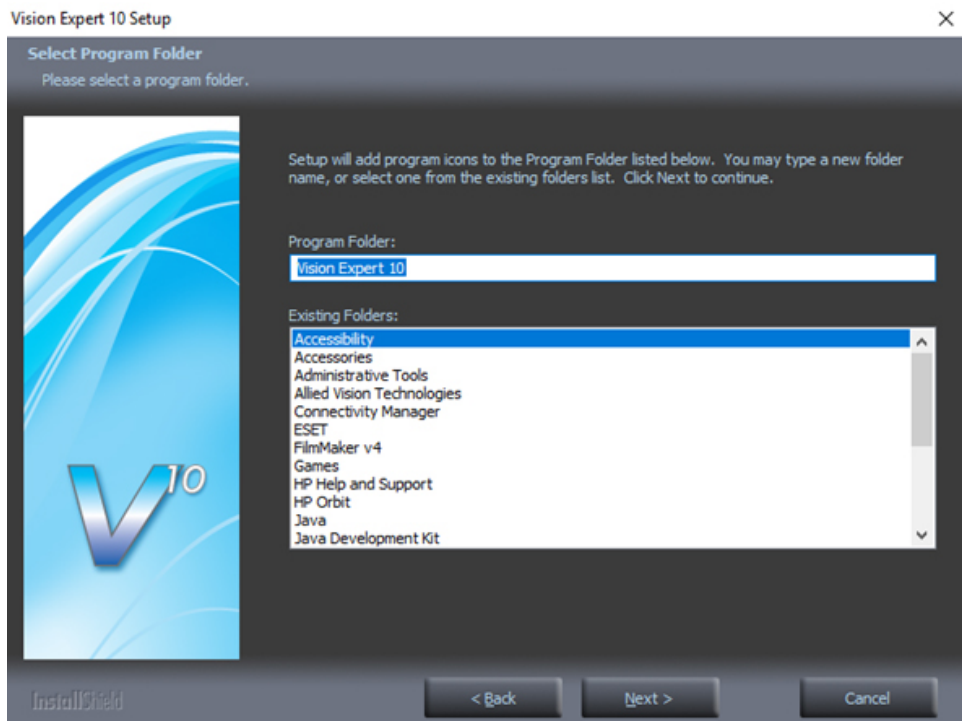


The installation will continue.

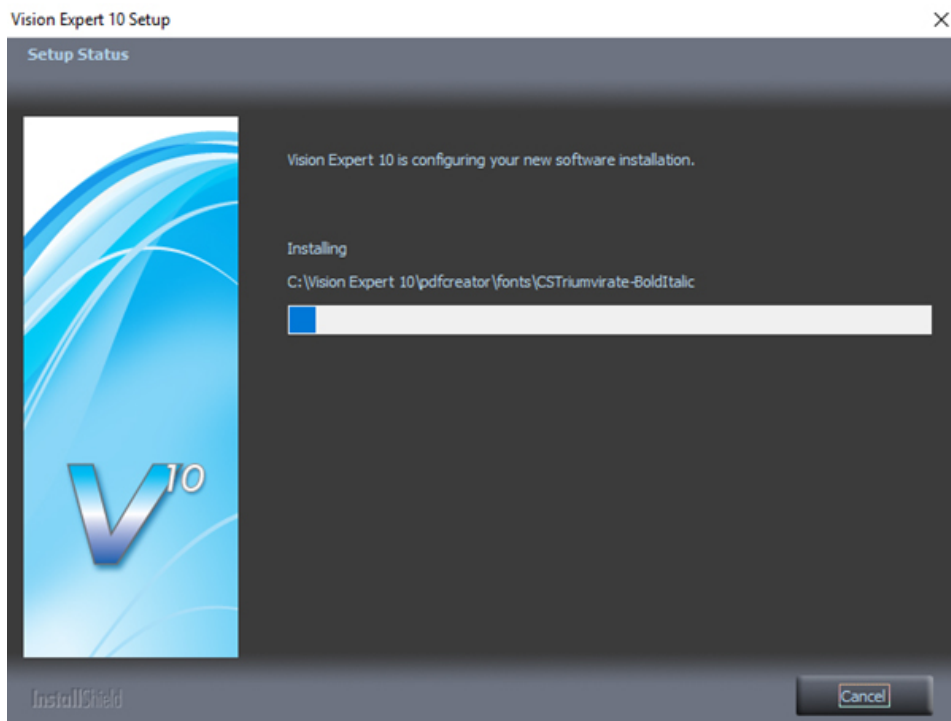

Select the Vision Express S5 by placing a check mark in the box to the left of Vision Express in the Manufacturer list, then select Next. If you purchase another engraving system from Vision, it can be added to the machine list at a later date from within the Vision software.

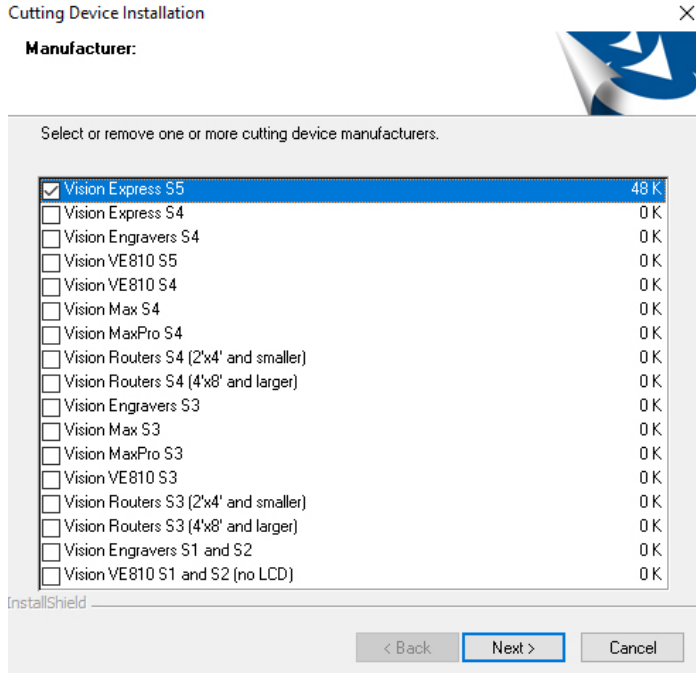

Select the Vision Express S5. Note – The Vision Express Vice/Center Origin S5 is used when using the center vice accessory.

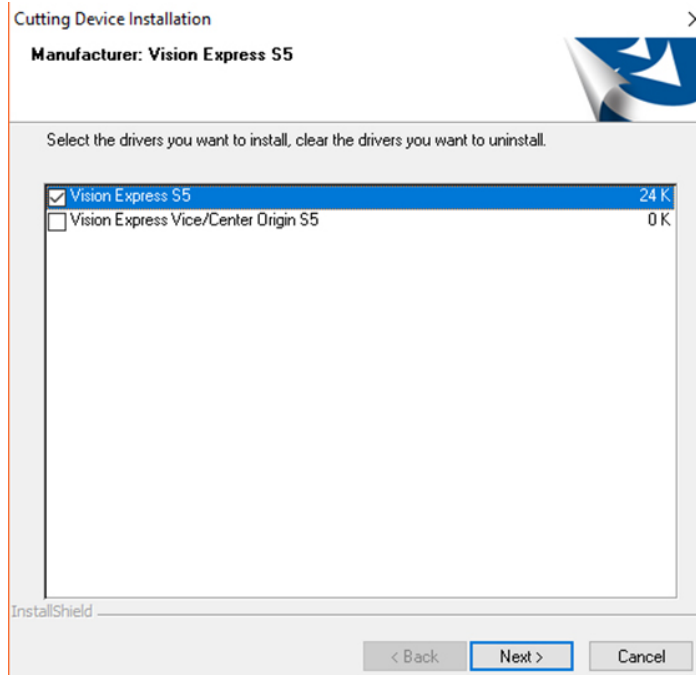

Select Continue to install True Type fonts and Vision Engraving Fonts on your computer.

Font Installation

Welcome to the Vision Expert Font Installation Wizard. To use a font in Vision Expert, it must be installed.

 
Clicking Continue will start the installation of TrueType fonts, Vision Pro VEF fonts, Corel WFN fonts and Adobe Type1 fonts.

Install TrueType Fonts


Now installing fonts that are present on your system.

Searching for fonts...

77 fonts found.




Click yes to install all additional fonts from your C:\ Drive.

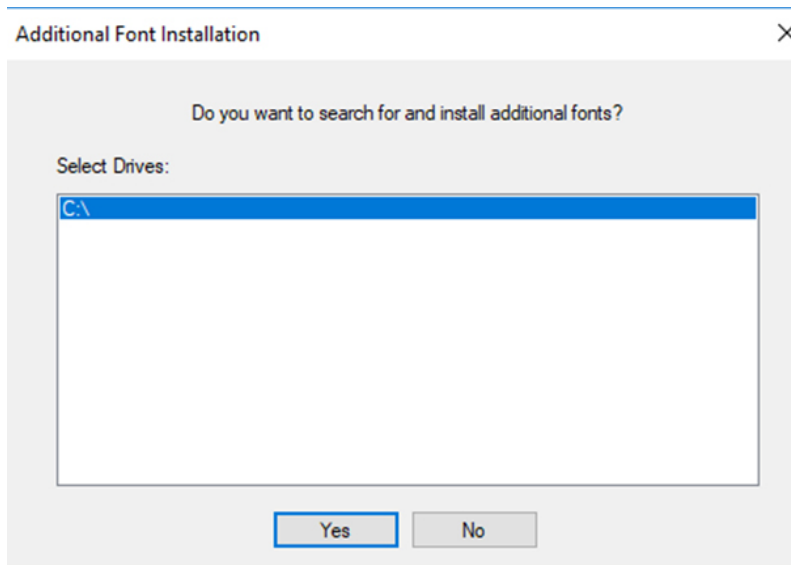


All system fonts will be installed.


Installing Additional Fonts On Local Disks

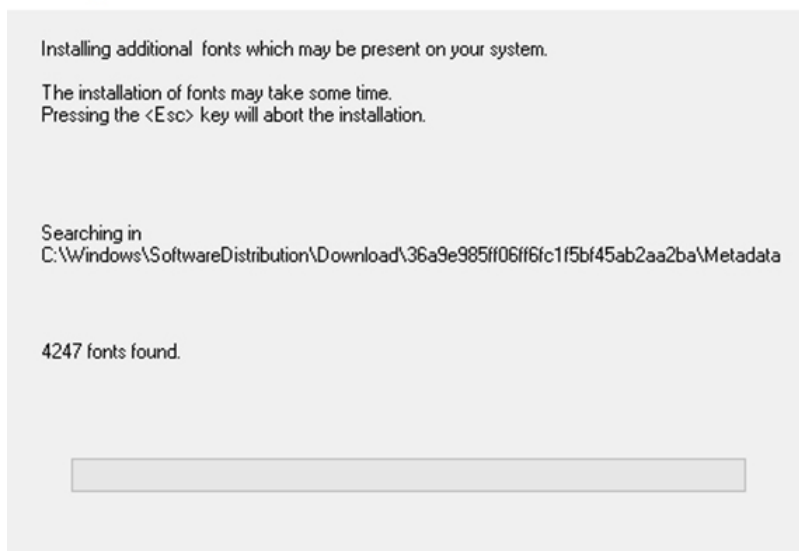


Press OK

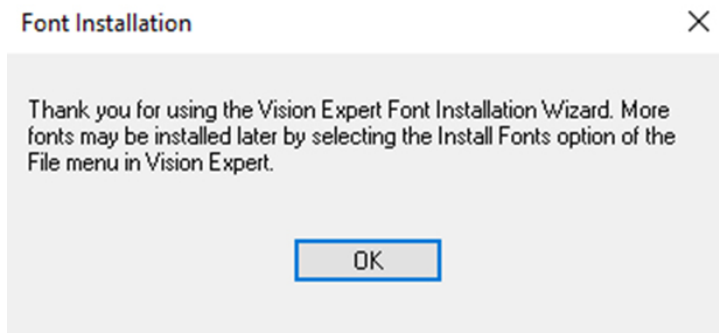

Press on the Finish button.

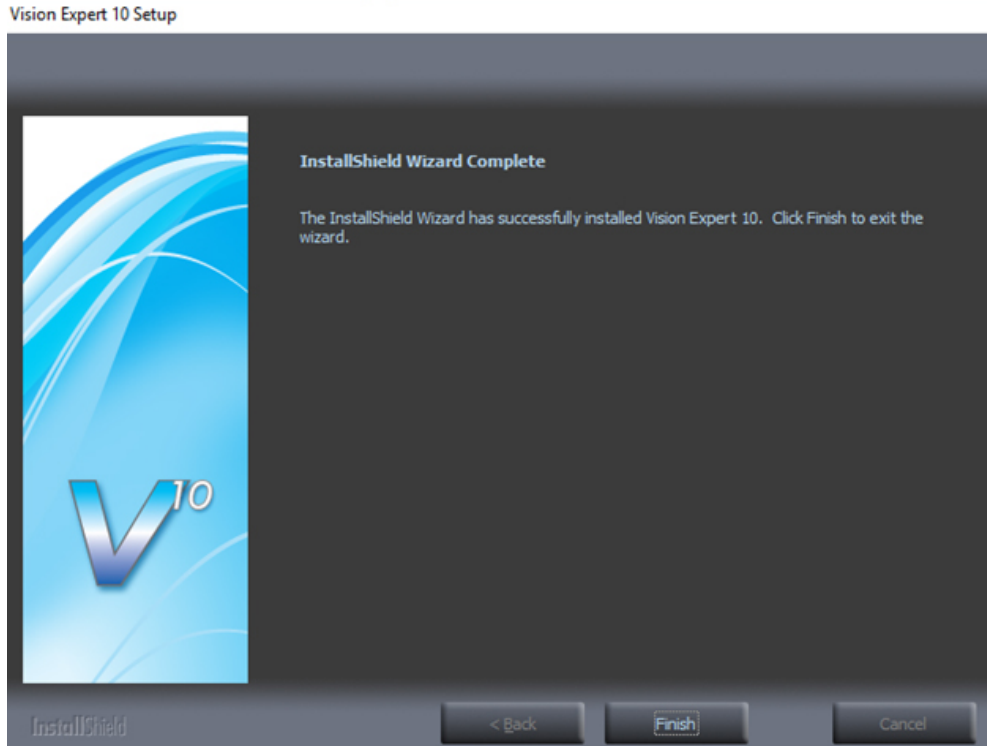

Press the Exit button .

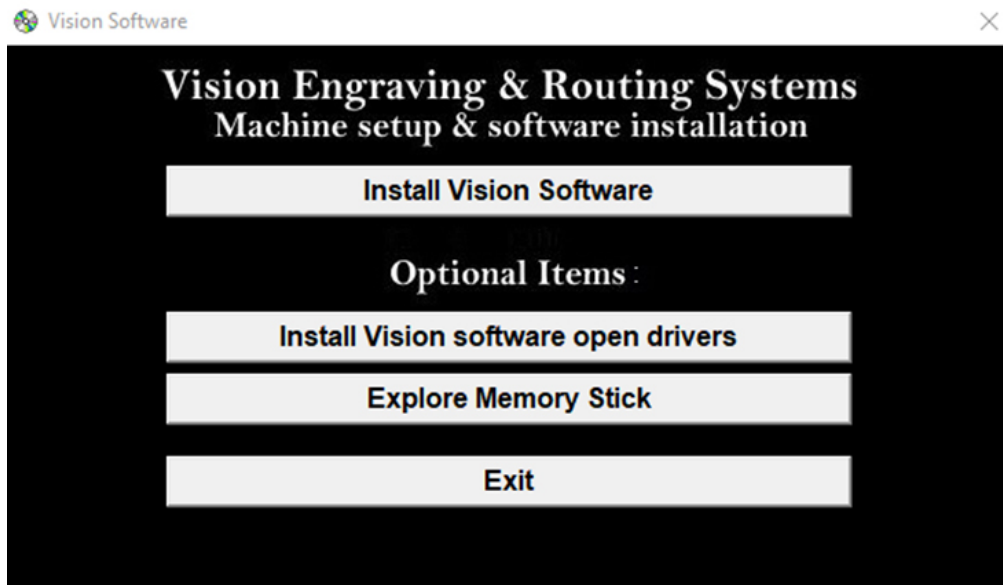

The Vision manuals icon should now appear on your computer's desktop along with an icon for your version of Vision 10 software.



