

Vision Software Installation Guide

© 2012 Vision Engraving & Routing Systems



Vision Software Installation Guide

© 2012 Vision Engraving & Routing Systems

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.


Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.


Revised: 12/28/2012

1 Vision Software Installation


All Vision Software and associated files are located on the supplied USB flash drive. There are no CD's for this installation. To begin the installation, insert the USB flash drive into an available USB port on your computer. The computer will recognize the USB drive and the following screen will appear. Select Continue without scanning.

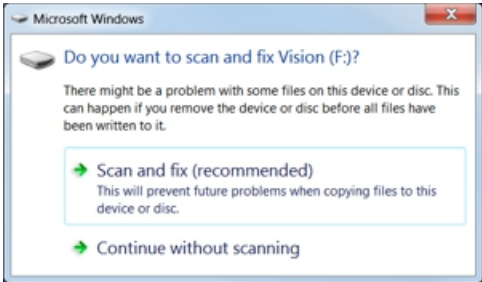


Then select Open folder to view files.

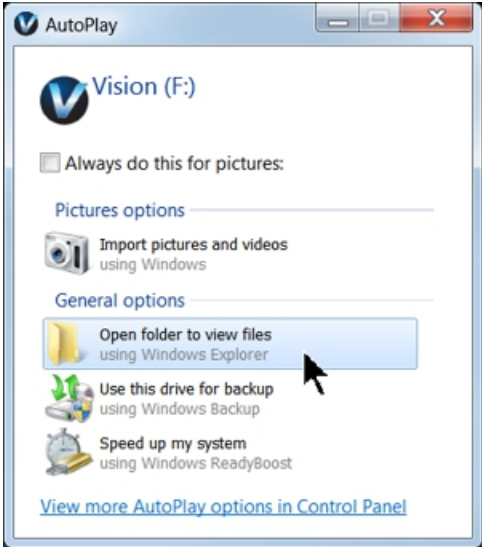


Locate the file named Start and double click on the file to start the installation. The screen below shows Start.exe, but your computer might not show the .exe portion.

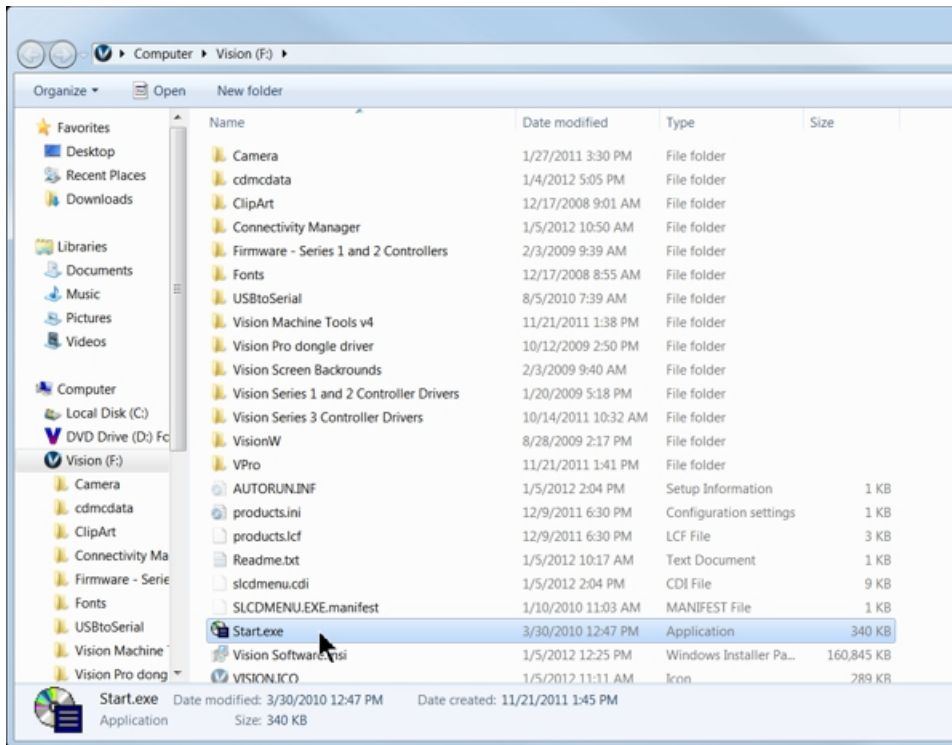


From the Main Installation Screen, Select Step 2 - Install Vision Software.

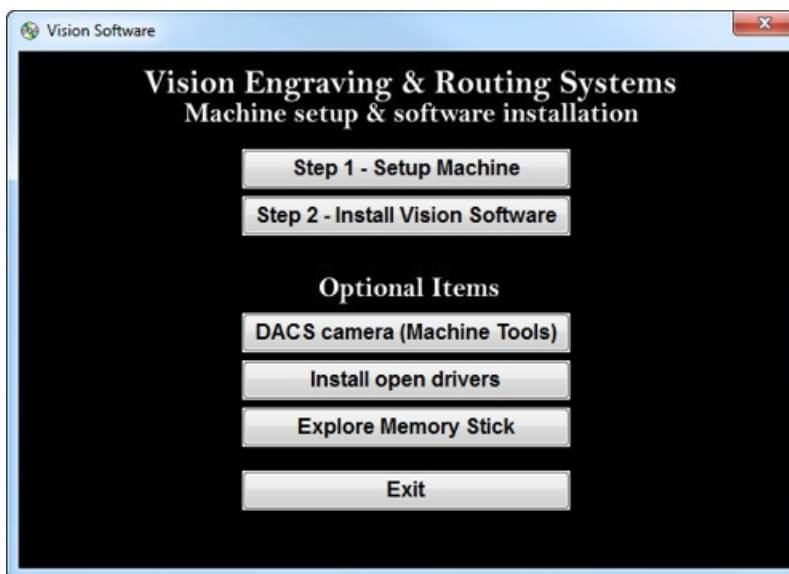


The Windows Installer will prepare the installation.

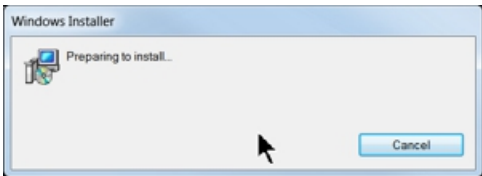


Select Next.

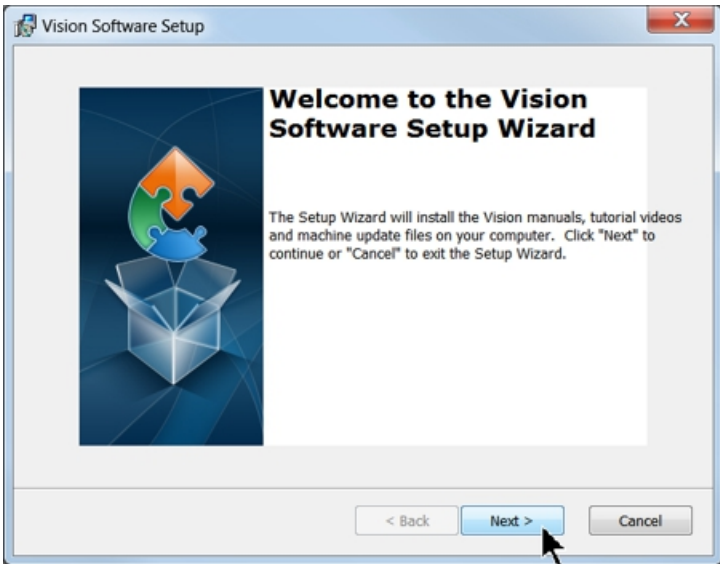

Select Install.

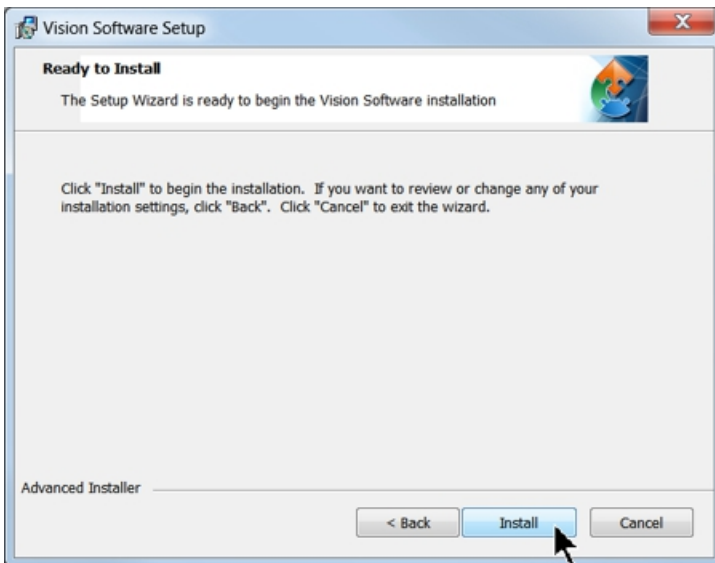


The installation will proceed.

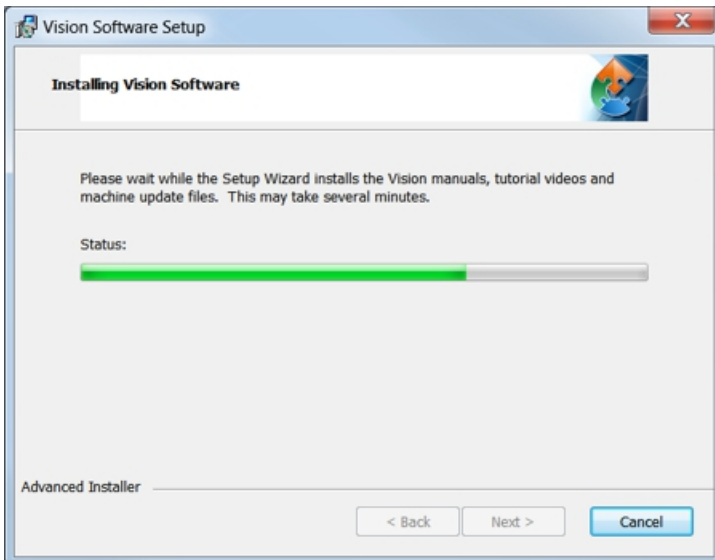


Select the appropriate language and select OK.




Installation will proceed.

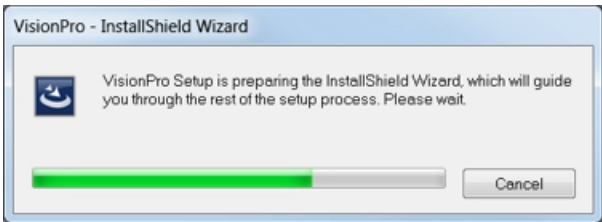


Select Next to begin the installer.

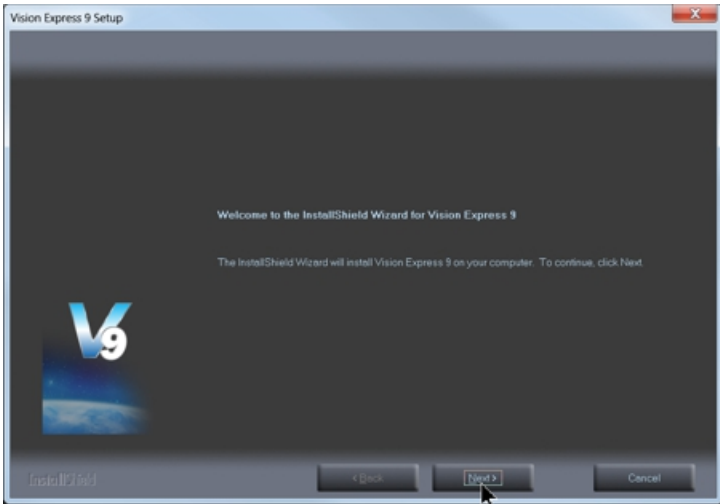


Select Accept the license agreement, then select Next.

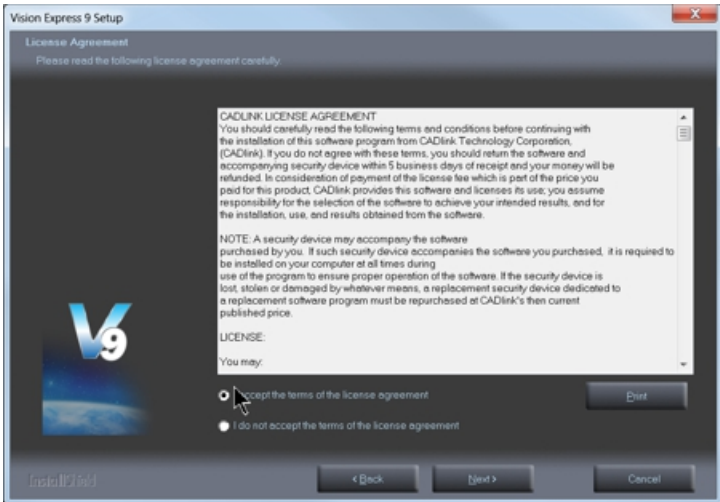


Select Next (or change the destination folder - not recommended).

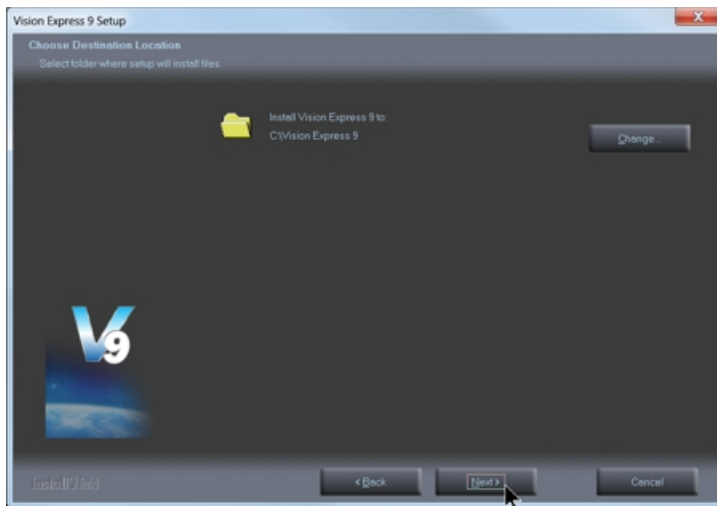


Select Next to create the folder.

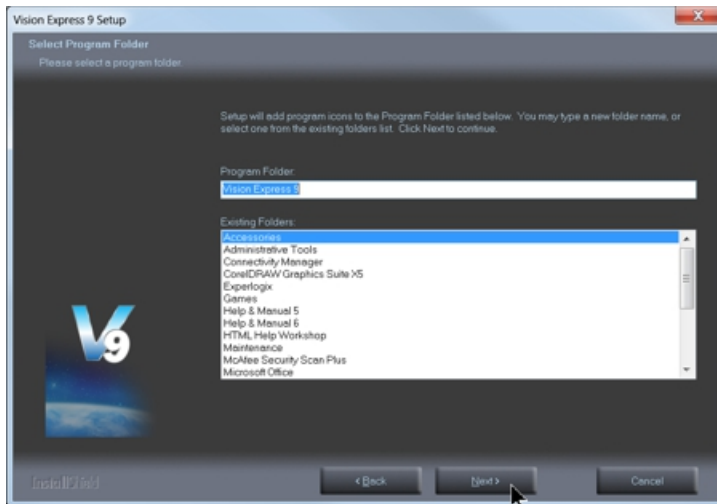


The installation will continue.

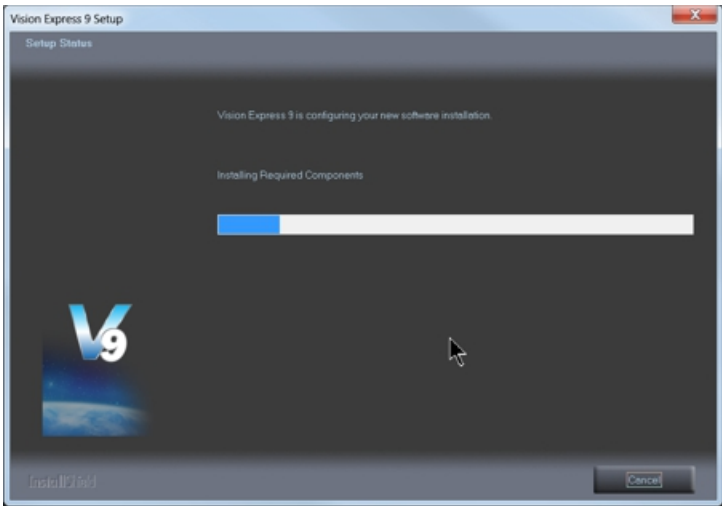


Select your machine from the Manufacturer list on the left side of this window by clicking in the box to the left of the machine (or machine series) you own. The right side of the window will list a selection of Output Devices. Only put a check mark in the box(es) to the left of the Output Device(s) you own. Then select Next. If you purchase another engraving system from Vision, it can be added to the machine list at a later date from within the Vision software.

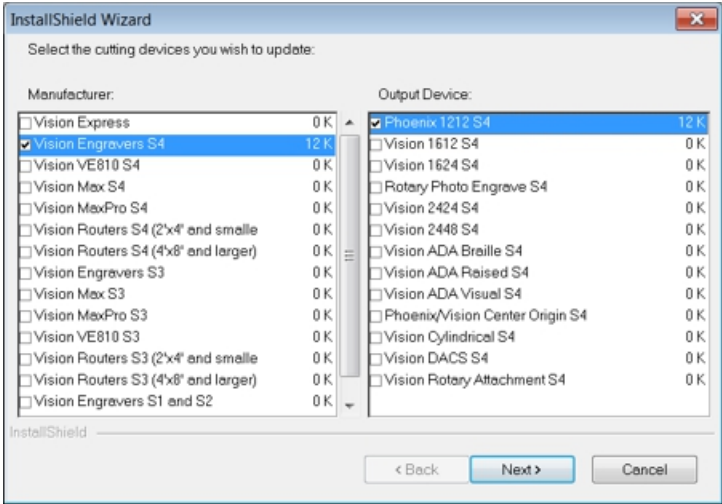


Select Continue to install True Type fonts and Vision Engraving Fonts on your computer.

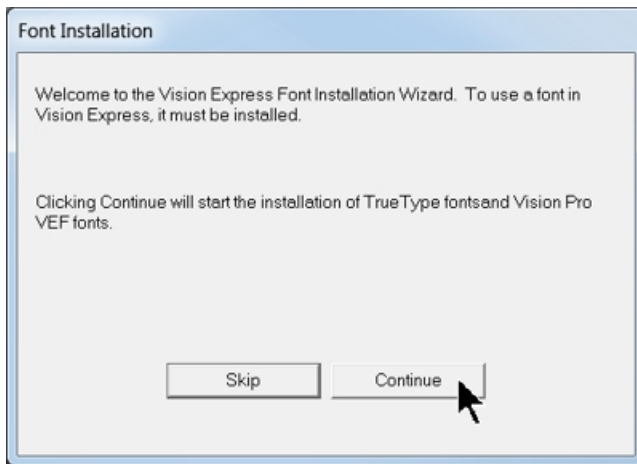


The software will look for True Type fonts on your computer and allow the Vision software to use them.

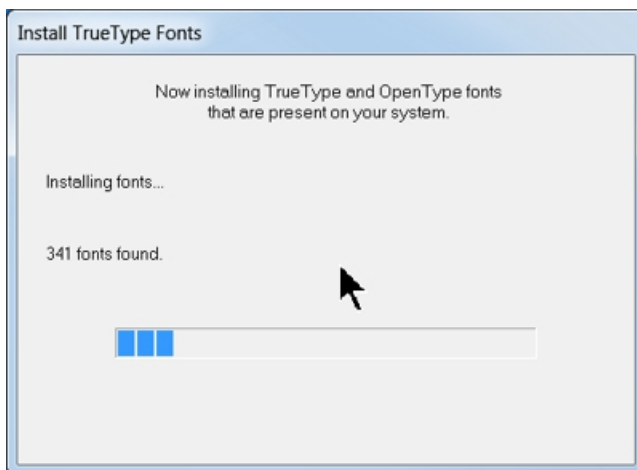


Once the True Type fonts are installed, select OK.

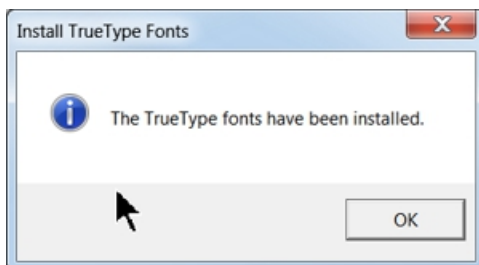


In this step, the software will install any Engraving fonts on your computer.

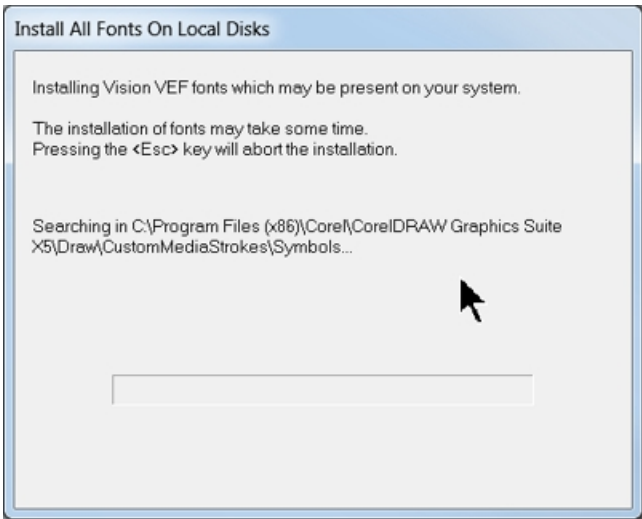


When complete, click on OK.

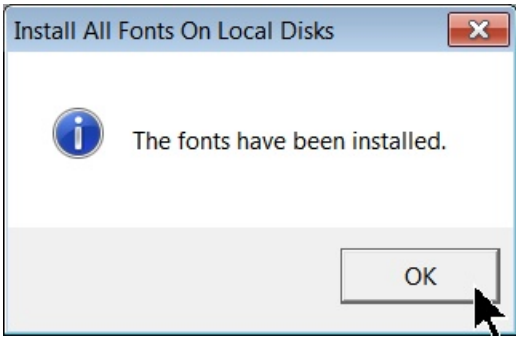


In order to install the fonts on the USB drive, select A Removable drive and from the drop down list, select the drive letter for the Vision USB drive plugged into your computer.

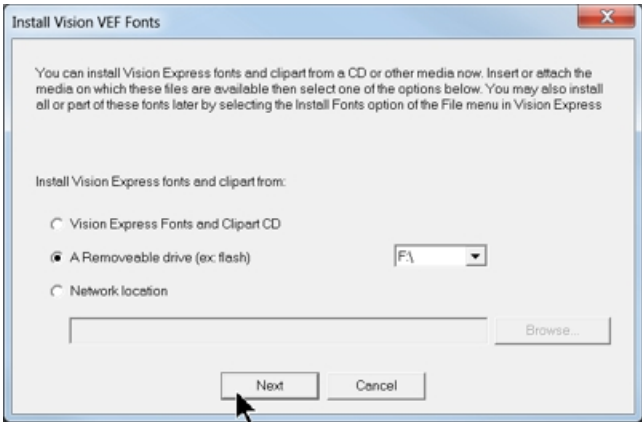


Select OK to install to the default folder.

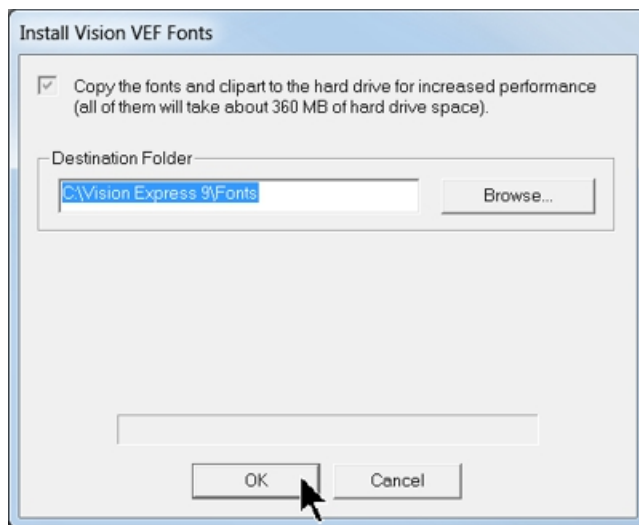


Select OK. All fonts and clipart have been installed from the USB drive at this time.

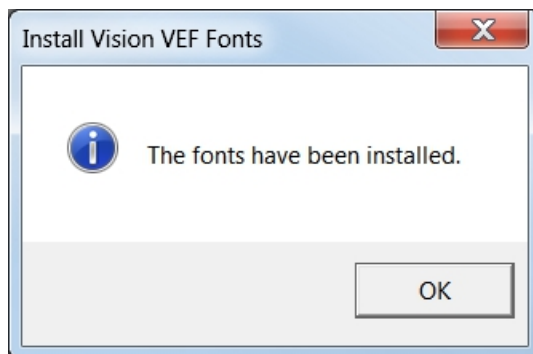


Select OK to return to the main installation screen.

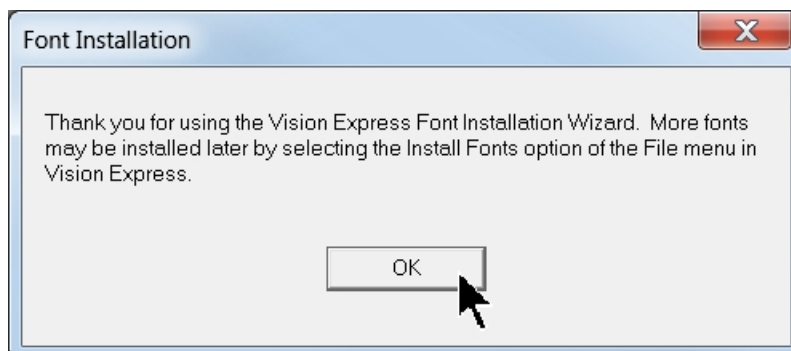


To complete the installation, select Finish.

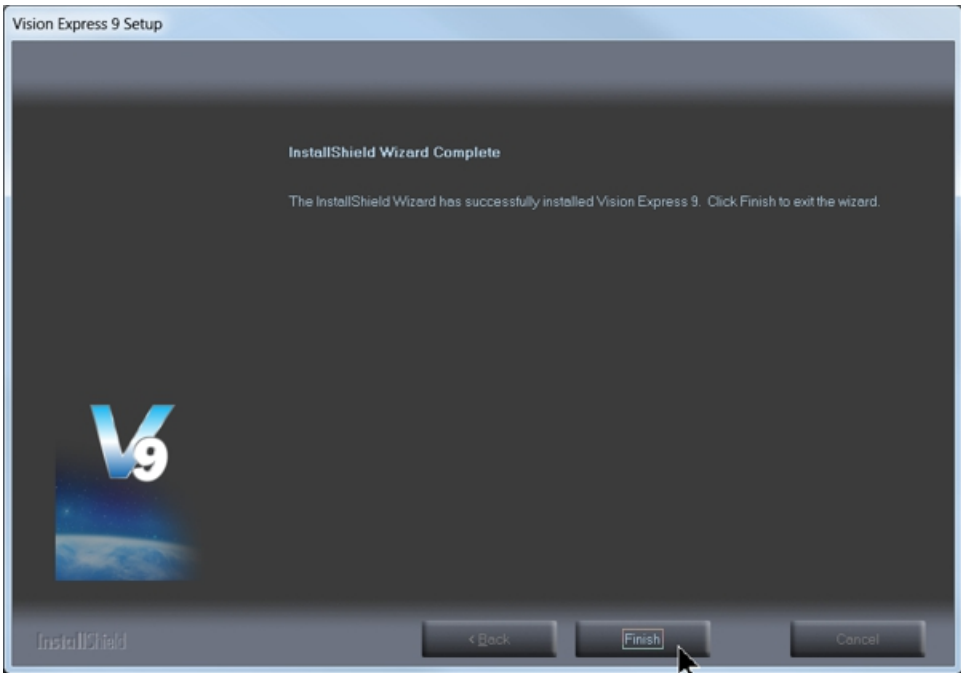

To close the Software Setup window, select Finish.

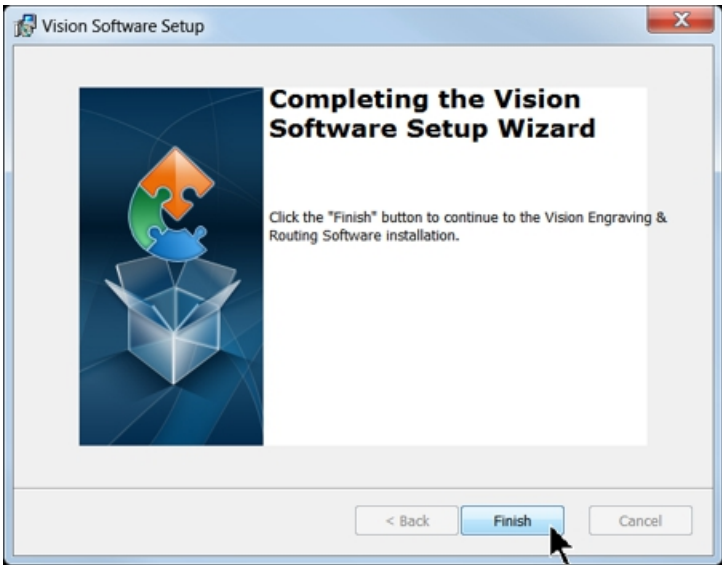

Select Exit to close the installer.

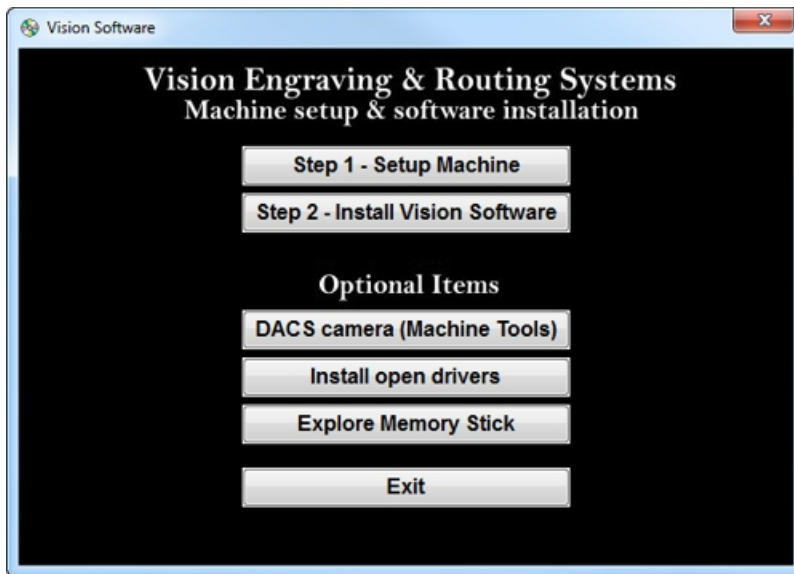

The Vision manuals icon should now appear on your computer's desktop along with an icon for your version of Vision 9 software.



Clicking on the Vision manuals link will give the user access to User Manuals, Installation Guides, Accessories and Training Videos.

If you were supplied with an Orange Dongle (orange USB stick), keep it installed in your computer's USB port in order to use the Vision software. If you were supplied with another color USB stick with your machine, it can be removed at this time from your computer. Installation is now complete.

